

# RATIO:FEEDER<sup>®</sup>

## 1243-4 BULKHEAD STRAINER FOR HIGH CAPACITY SYSTEMS

The bulkhead strainer is designed to attach to  $\frac{1}{2}$ " I.D. flexible tubing.

It should be installed as illustrated about 2-3 inches above the bottom of the solution tank.

The tank should be cleaned periodically to remove dirt and solids which have settled out.

The screens should also be cleaned at regular intervals and replaced if necessary to prevent plugging.

