


Two Inch J Plus Injector Installation Example w/Air Kit

J Plus controller, 2 inch jet meter shown
2 high capacity pumpers pumping fertilizer.
Optional EC & pH monitors
Plumbed using sch 40 PVC pipe

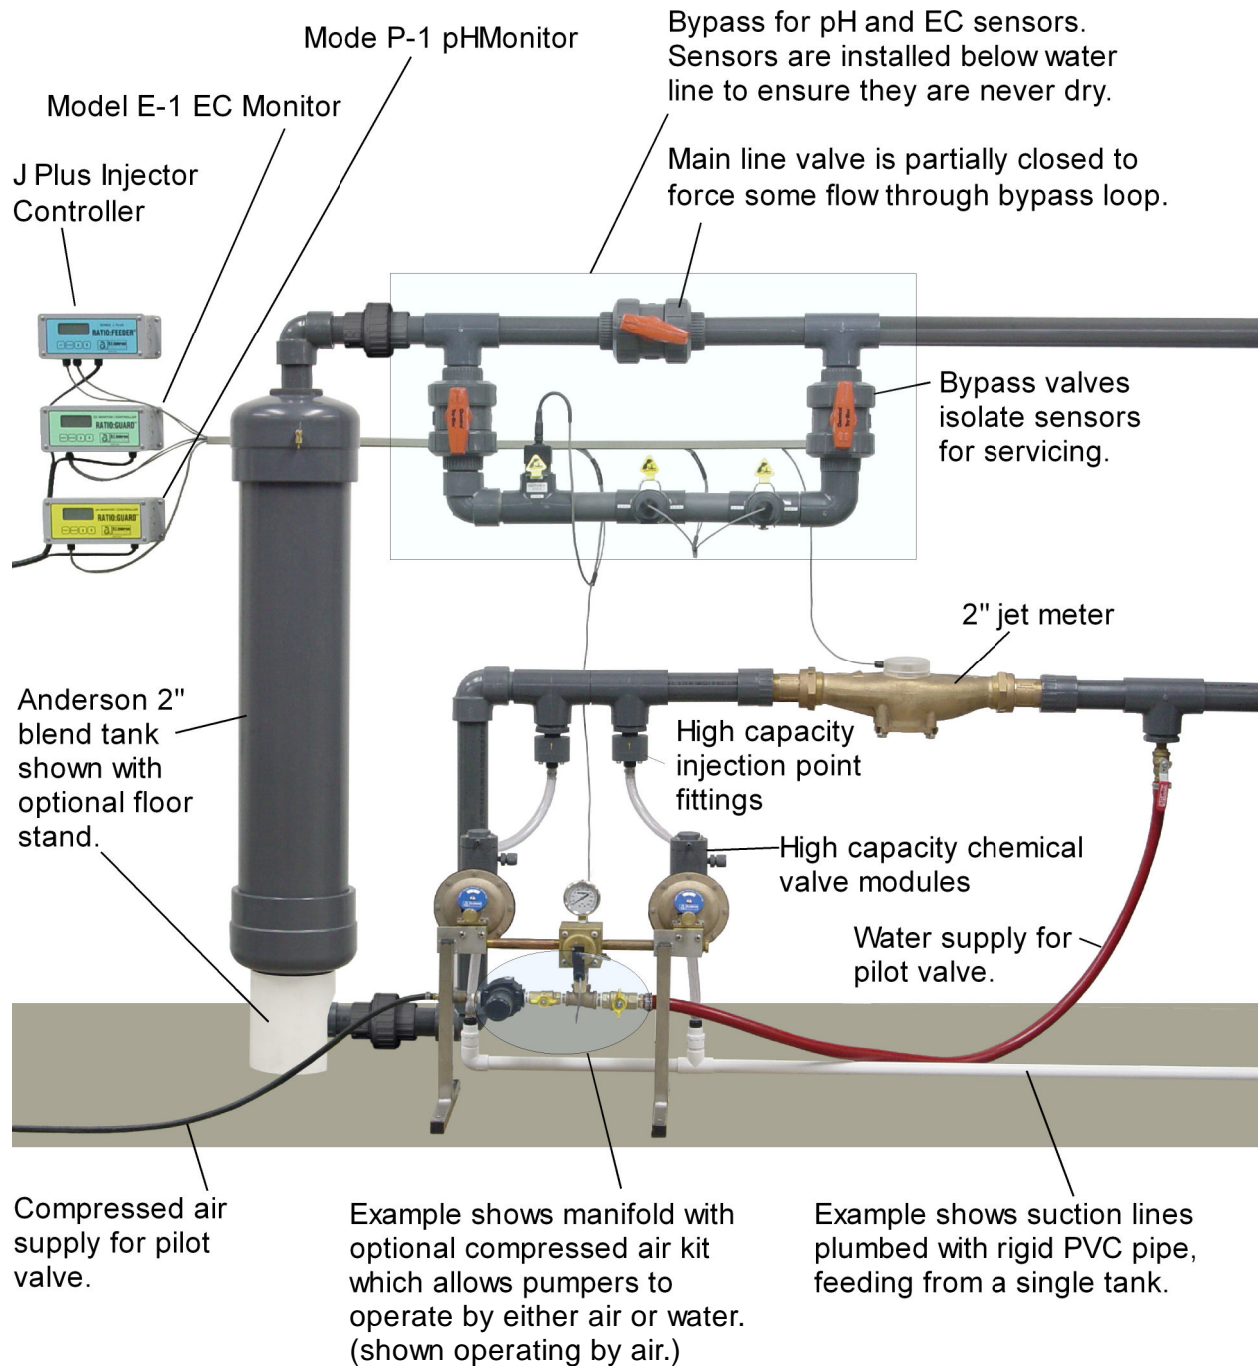

Piping layout may be altered to fit available space.

Some PVC plumbing items are not supplied with unit. (See page 2.)

Two Inch J Plus Injector Installation Example w/Two Chemicals

J Plus controller, 2 inch jet meter shown
 3 high capacity pumpers pumping fertilizer.
 1 standard pumper pumping a low dose chemical.
 Optional EC & pH monitors.
 Plumbed using sch 40 PVC pipe

